

ZONE CONTROLLER



Zone Controllers are six-zone wiring centres for two-wire actuators and thermostats.

They are expandable to support up to 12 zones in a two-board, bridged configuration.

Try the Zone Controller once.

Wiring actuators is fast and easy with the IVAR Zone Controller. Angled connectors provide easy-to-see wiring and dip switches eliminate the need for jumper wires.

IVAR controls are proudly designed and manufactured in Canada. A rigid metal enclosure and a five year limited warranty prove our commitment to quality.



www.ivar-na.com